

BDS TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	REMEDY
Unit does not run.	<ol style="list-style-type: none"> 1. The door is open. 2. The bucket is not seated fully in the unit. 3. The bucket handle is not facing out. 4. The bucket is full. 5. The top cover is not on the machine. 6. The chute is not installed correctly on the unit. 7. The front cover is not on the machine. 8. The unit is unplugged. 9. The ON/OFF switch is in the OFF position. 10. The circuit breaker is tripped. 	<ol style="list-style-type: none"> 1. Close the door. 2. Install the bucket fully into the unit. 3. Remove the bucket and re-install with the handle facing out. 4. Empty the bucket and re-install in the unit. 5. Install the top cover. 6. Install the chute as shown on page 8. 7. Install the front cover. 8. Plug the unit into the appropriate power source. 9. Toggle the ON/OFF switch to the ON position. 10. Reset the breaker.
Unit is on but the bar is not turning.	<ol style="list-style-type: none"> 1. A bottle or piece of glass or foreign material is jammed in the chute or drum. 	<ol style="list-style-type: none"> 1. While wearing protective gloves, unplug unit, remove bucket, and reach into drum. Grasp crusher bar and rotate counter-clockwise. This should dislodge any material.
Unit is on but the bar is not turning and there are no motor sounds.	<ol style="list-style-type: none"> 1. The motor has turned off on thermal overload due to excessive heat which is caused by inadequate ventilation or high ambient temperature (i.e., room temperature at 100°F or more). 	<ol style="list-style-type: none"> 1. Turn unit off, wait approx. 30 minutes and turn on again. In all cases, to minimize these events, allow ventilation space on sides and back of unit for adequate circulation of air flow.
Unit is on, motor is running, but bottles are falling through without being crushed.	<ol style="list-style-type: none"> 1. The Crusher bar is jammed. 2. The drive belt has broken. 	<ol style="list-style-type: none"> 1. Un-jam the bar - While wearing protective gloves, unplug unit, remove bucket, and reach into drum. Grasp crusher bar and rotate counter-clockwise. 2. Obtain a new belt. Unplug the unit, remove the top cover, replace belt. Re-install top cover.